



MacBook Pro 17" Unibody Bluetooth Board Replacement

Regain Bluetooth connectivity by replacing your MacBook Pro 17" Unibody's Bluetooth board.

Written By: Andrew Bookholt



INTRODUCTION

Use this guide to replace your Bluetooth board.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:


- [MacBook Pro 17" Unibody \(Early/Mid 2009\) Bluetooth Board](#) (1)

Step 1 — Lower Case

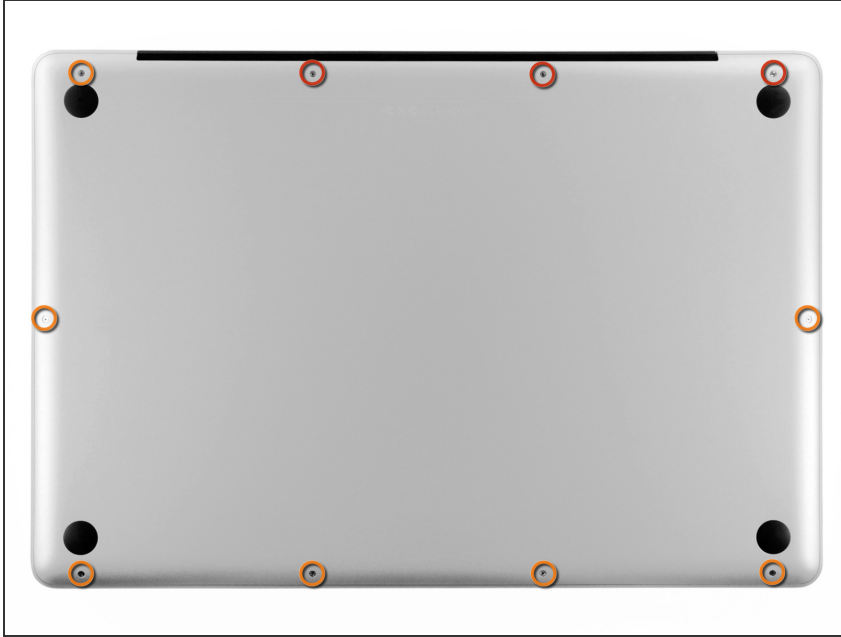


- Remove the following ten screws securing the lower case to the upper case:
 - Three 13.5 mm Phillips screws.
 - Seven 3 mm Phillips screws.

Step 2

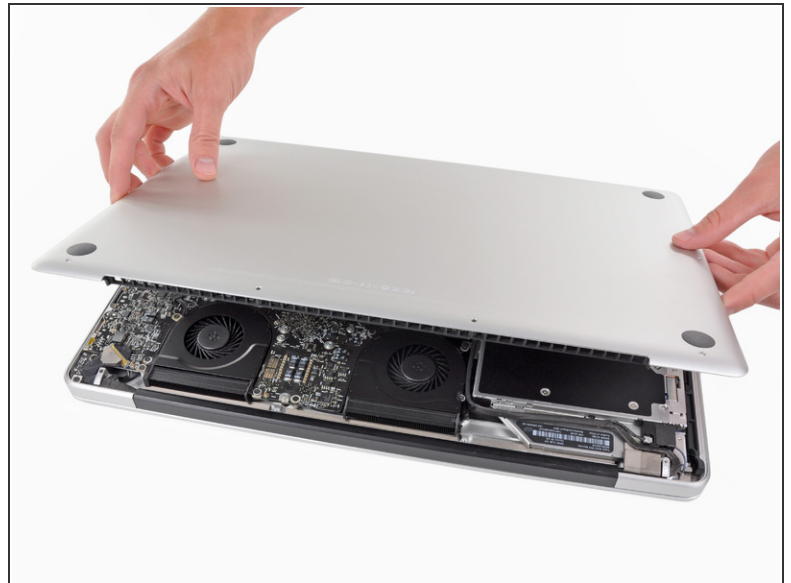

- Wedge your fingers between the lower case and the vent, and lift upward to release the clips holding the lower case to the upper case.
- Remove the lower case.


Step 3 — Battery

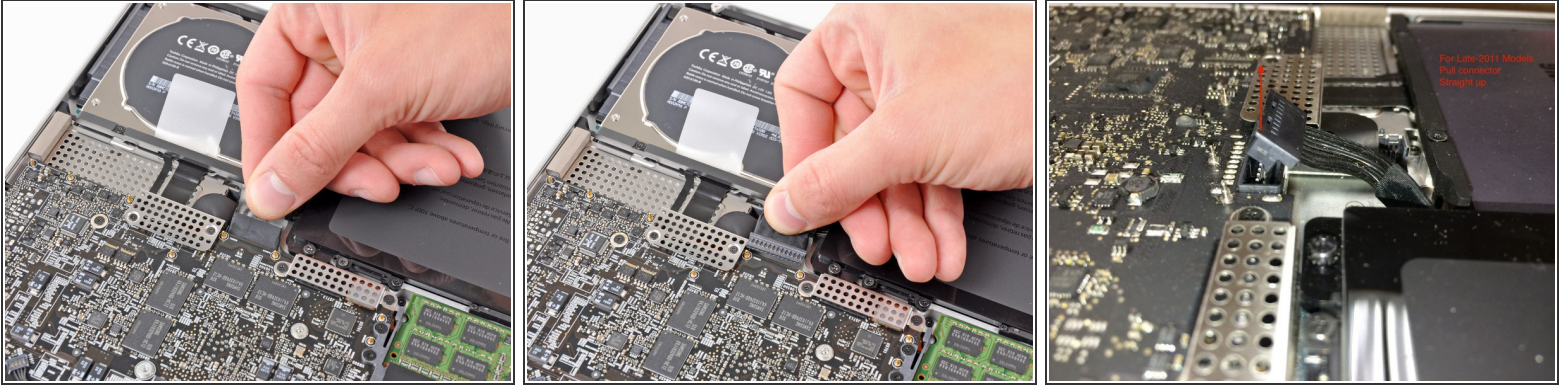

⚠ Whenever working near the logic board, it is always wise to first disconnect the battery to avoid short circuits.

- If present, grab the plastic tab attached to the battery connector and pull it toward the front edge of the device. For Late-2011 models the battery connector will not have a tab and is simply a plug that inserts straight down into the motherboard--to remove pry the plug straight up.
- i** If the plastic tab is missing, use a spudger to pry the connector up from its socket.
- ✦** Pull the tab parallel to the face of the logic board.

Step 4 — Bluetooth Board

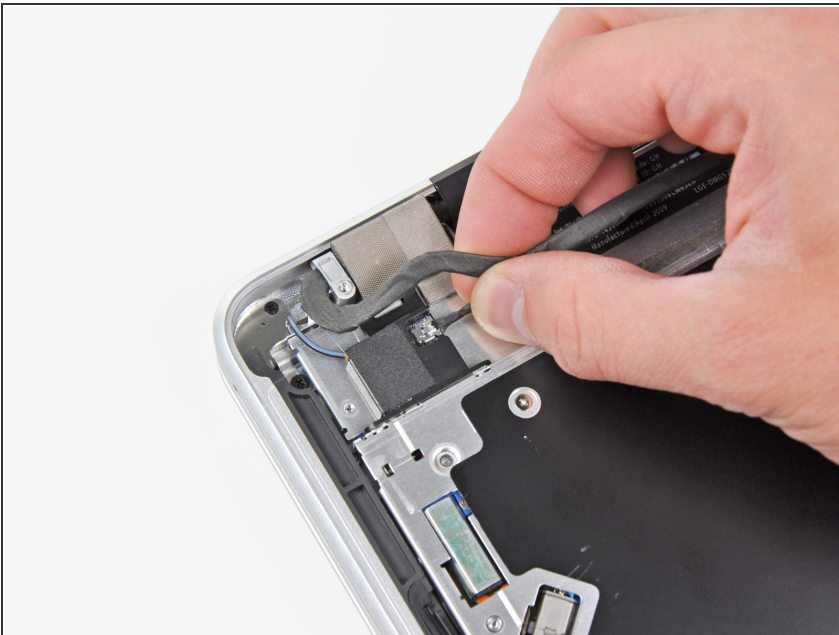


- Carefully pull the Bluetooth cable toward the fans to disconnect it from the Bluetooth board.
- i** Pull the cable parallel to the face of the optical drive.

Step 5



- Use the flat end of a spudger to peel the thin plastic cover off the top and sides of the Bluetooth board housing.

Step 6

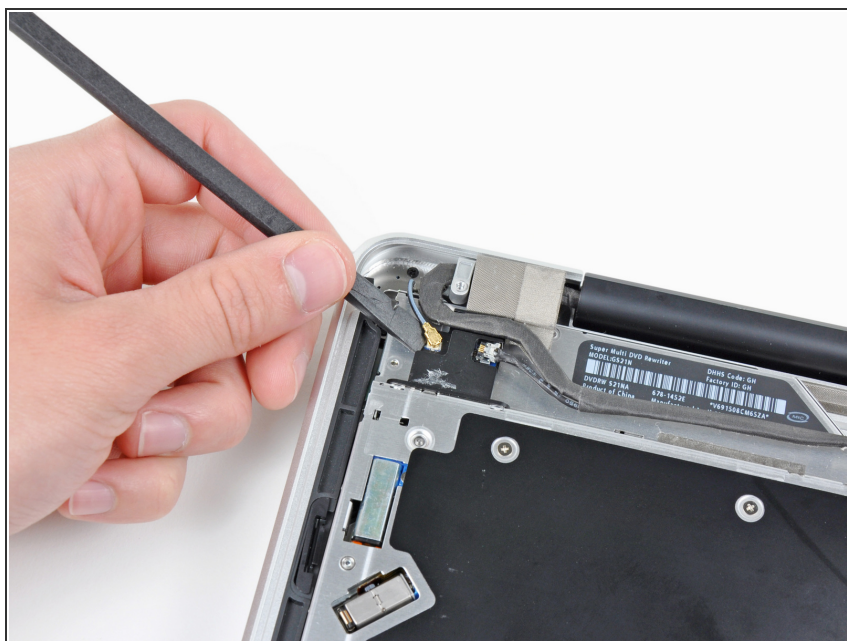

- Use the flat end of a spudger to pry the Bluetooth antenna connector up and off its socket on the Bluetooth board.

Step 7



- Remove the two 2.2 mm Phillips screws securing the Bluetooth housing to the side of the optical drive.

Step 8



- De-route the camera cable from its slot in the Bluetooth housing and remove the Bluetooth board from the upper case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 01:13:53 AM.